 


*4K—BUTTER DISH—2.50

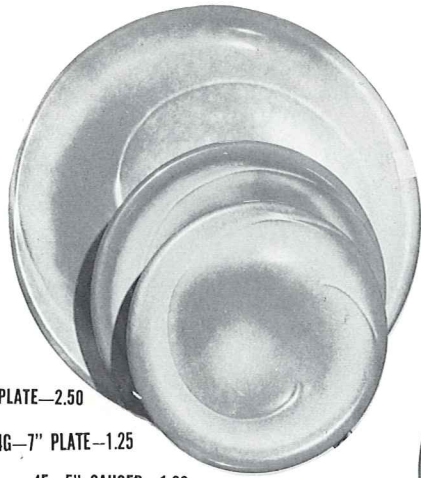

4F—10" PLATE—2.50

4G—7" PLATE—1.25

4E—5" SAUCER—1.20



5CC—5 OZ. TEACUP—1.20



*4X—14 OZ. CEREAL—1.50



*5L—12 OZ. TUMBLER—1.20



*5LC—6 OZ. JUICE—1.00



4C—CUP—1.20



*4Y—6" SPOON HOLDER—1.00



4H—SALT & PEPPER—1.75



4A—8 OZ. CREAMER—1.50



4B—SUGAR WITH LID—2.00



*4M—18 OZ. MUG—1.80



4Z—6" SOUP—1.25



4V—2 QT. BAKER/BEAN POT—4.50



4P—13" PLATTER—3.50



 
*4N—24 OZ. VEGETABLE—1.50



4W—3 QT. BAKER/BEAN POT—6.00



4QD—11" DIVIDED BOWL—3.50

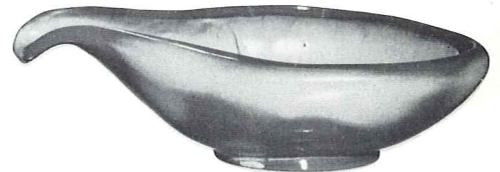

*214—12" SERVICE BOWL—2.50



*201—9" BOWL—2.00



*BP—6 OZ. BEAN POT OR CUSTARD/WITH LID—1.75



 
*BP—6 OZ. BEAN POT OR CUSTARD—1.00



*4SC—11 OZ. SOUP CUP—1.50



4XL—24 OZ. SALAD OR GUMBO—1.50

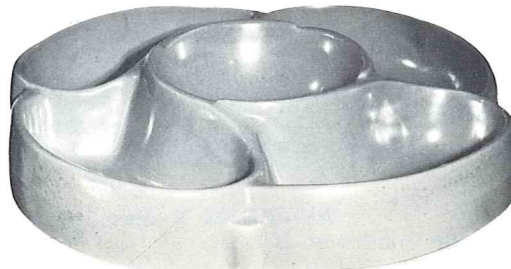

*818—5 SECTION LAZY SUZETTE ON BALL BEARING BASE—12"—7.50



*4D—2 QT. PITCHER—4.00