 




*4K—BUTTER DISH—3.00

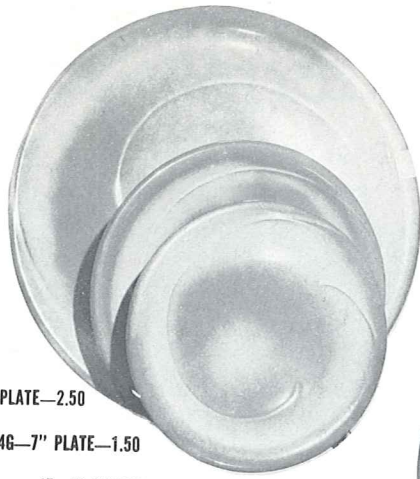

4F—10" PLATE—2.50

4G—7" PLATE—1.50

4E—5" SAUCER—1.25



*5CC—5 OZ. TEACUP—1.25



*4X—14 OZ. CEREAL—1.50



*5L—12 OZ. TUMBLER—1.50



*5LC—6 OZ. JUICE—1.25



4C—CUP—1.35



*4Y—6" SPOON HOLDER—1.25



*4H—SALT & PEPPER—2.00



4A—8 OZ. CREAMER—1.75



4B—SUGAR WITH LID—2.25



*4M—18 OZ. MUG—2.00



*4Z—6" SOUP—1.25



*4V—2 QT. BAKER/BEAN POT—4.50



*4N—24 OZ. VEGETABLE—2.00



 
*4P—13" PLATTER—3.50



*214—12" SERVICE BOWL—2.50



*4W—3 QT. BAKER/BEAN POT—6.00

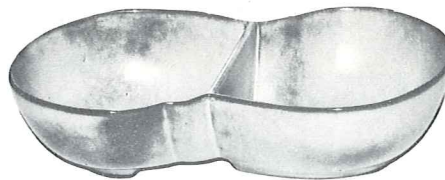

*4QD—11" DIVIDED BOWL—3.50



*201—9" BOWL—2.00



*BP—6 OZ. BEAN POT OR CUSTARD/WITH LID—1.75



*BP—6 OZ. BEAN POT OR CUSTARD—1.00



*4SC—11 OZ. SOUP CUP—1.50



*4XL—24 OZ. SALAD OR GUMBO—1.50



*M2—18 OZ. STEIN—2.00



*M1—15 OZ. STEIN—1.80



*4D—2 QT. PITCHER—4.50