



94FL—10" PLATE—2.50

94F—9" PLATE—2.00

94G—7" PLATE—1.50

94E—5" SAUCER—1.25



94M—16 OZ. MUG—2.00



94H—SALT & PEPPER—2.00



94XL—20 OZ. BOWL—1.50



 
94B—SUGAR WITH LID—2.25



94A—8 OZ. CREAMER—1.75



94C—5 OZ. CUP—1.35



94X—14 OZ. CEREAL—1.25



 
94V—2 QT. BAKER/BEAN POT—4.50



94L—12 OZ. TUMBLER—1.50



94XO—6 OZ. DESSERT—1.00

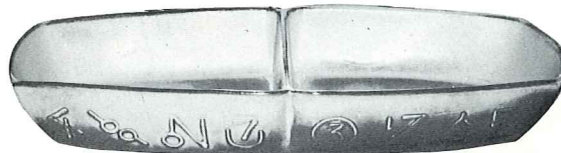

94QD—13" DIVIDED BOWL—3.50



94W—3 QT. BAKER/BEAN POT—6.00



94Q—13" PLATTER—3.50



 
94N—1 QT. VEGETABLE BOWL—2.00




94P—17" PLATTER—8.50



94J—2 CUP TEAPOT—2.50

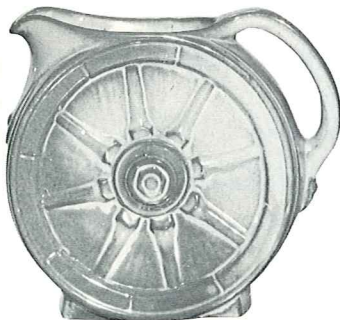

94D—2 QT. PITCHER—4.50

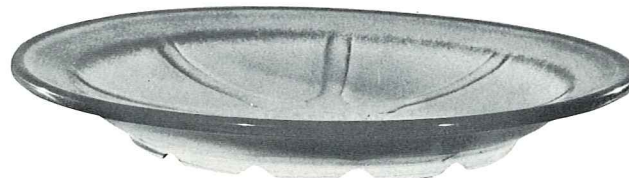 

94FC—15" CHOP PLATE—10.00



94T—6 CUP TEAPOT—4.00