 




167—3½" MINIATURE HORSESHOE—1.50

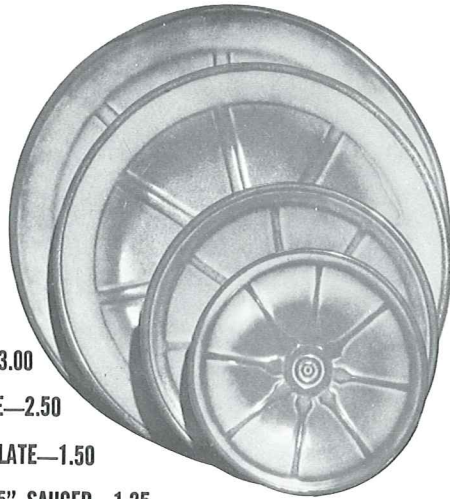

94FL—10" PLATE—3.00

94F—9" PLATE—2.50

94G—7" PLATE—1.50

94E—5" SAUCER—1.25



94H—SALT & PEPPER—2.50



94M—16 OZ. MUG—2.50



94B—SUGAR WITH LID—2.50



94A—8 OZ. CREAMER—2.00

94AB—CREAM & SUGAR SET—4.50



94C—5 OZ. CUP—2.00



 
94XL—20 OZ. BOWL—2.00



94V—2 QT. BAKER/BEAN POT—5.00




94L—12 OZ. TUMBLER—2.00



94X—14 OZ. CEREAL—1.50



 94XO—6 OZ. DESSERT—1.25

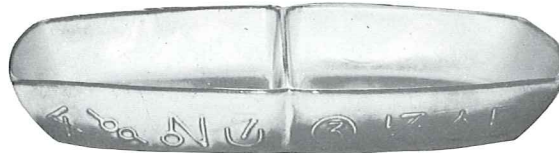

94QD—13" DIVIDED BOWL—4.00



94W—3 QT. BAKER/BEAN POT—6.50



94Q—13" PLATTER—4.00



94N—1 QT. VEGETABLE BOWL—2.50



 
94P—17" PLATTER—10.00



94D—2 QT. PITCHER—5.00



94J—2 CUP TEAPOT—3.50

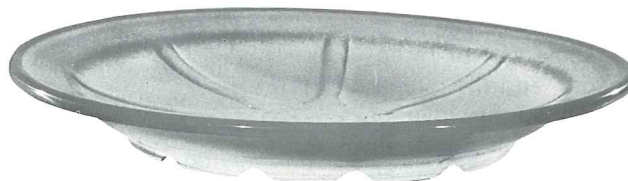

94FC—15" CHOP PLATE—10.00



94T—6 CUP TEAPOT—5.00