 


*4K—BUTTER DISH—3.50

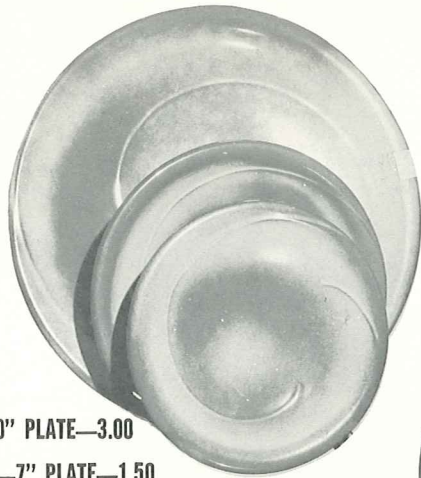

4F—10" PLATE—3.00

4G—7" PLATE—1.50

4E—5" SAUCER—1.25



*5CC—5 OZ. TEACUP—1.50



*4X—14 OZ. CEREAL—1.50



*5L—12 OZ. TUMBLER—2.00



*5LC—6 OZ. JUICE—1.50



4C—CUP—2.00



*4Y—6" SPOON HOLDER—1.50



*4H—SALT & PEPPER—2.50



4A—8 OZ. CREAMER—2.00



4B—SUGAR WITH LID—2.50



*4M—18 OZ. MUG—2.50



*4Z—6" SOUP—1.50



*4V—2 QT. BAKER/BEAN POT—5.50

4AB—CREAM & SUGAR SET—4.50



 
*4N—24 OZ. VEGETABLE—2.00



*4P—13" PLATTER—5.00



*4W—3 QT. BAKER/BEAN POT—7.00

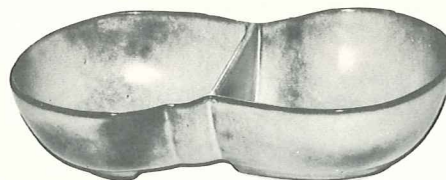

*4QD—11" DIVIDED BOWL—4.50



*224—8" ROUND BOWL—3.00



*201—9" BOWL—2.50



*BP—6 OZ. BEAN POT OR CUSTARD—1.00



*4SC—11 OZ. SOUP CUP—2.50



*4XL—24 OZ. SALAD OR GUMBO—2.00



*M2—18 OZ. STEIN—2.50



*4D—2 QT. PITCHER—5.00