


*4K—BUTTER DISH—4.00

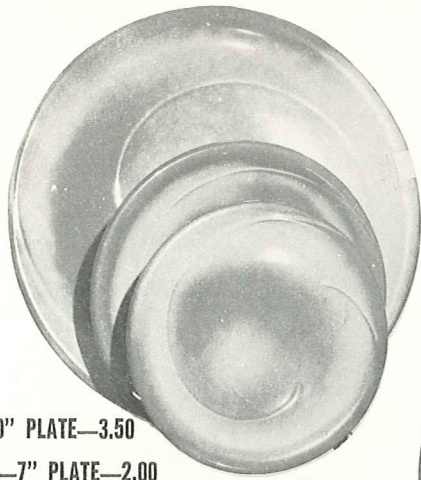

4F—10" PLATE—3.50

4G—7" PLATE—2.00

4E—5" SAUCER—1.50



*5L—12 OZ. TUMBLER—2.00



*5LC—6 OZ. JUICE—1.50



*5CC—5 OZ. TEACUP—2.00



*4X—14 OZ. CEREAL—2.00



4C—CUP—2.00



*4Y—6" SPOON HOLDER—2.00



*4H—SALT & PEPPER—3.00



4A—8 OZ. CREAMER—2.00



4B—SUGAR WITH LID—3.00



*4M—18 OZ. MUG—3.00



*4Z—6" SOUP—2.00



*4V—2 QT. BAKER/BEAN POT—6.00

*4V/W—BAKER/W WARMER SET—11.00



*4P—13" PLATTER—6.00




*4N—24 OZ. VEGETABLE—2.50



*4W—3 QT. BAKER/BEAN POT—7.50

*4W/W—BAKER/W WARMER SET—12.50

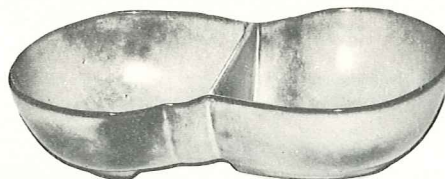

*4QD—11" DIVIDED BOWL—5.00



*224—8" ROUND BOWL—3.50



*201—9" BOWL—3.00



*BP—6 OZ. BEAN POT OR CUSTARD—1.25



*4SC—11 OZ. SOUP CUP—3.00



*4XL—24 OZ. SALAD OR GUMBO—2.50



*M2—18 OZ. STEIN—3.00



*4D—2 QT. PITCHER—6.00