



80 SET

80—2 QT. PITCHER 5L—12 OZ. TUMBLER



C12—7 OZ. MUG

82 SET (82—6 CUP CARAFE & LID 82W—WARMER)

Gift Sets



6T—6 CUP TEAPOT
WA3—6" WARMER W/CANDLE

5DA—6 OZ. CREAMER
5DB—6 OZ. SUGAR



5D SET

 
5D—3 QT. PITCHER 5M—16 OZ. MUG



6S—TWO-SPOUT GRAVY
5PS—9" PLATTER-TRAY



SOUP AND SANDWICH SET
4SC—11 OZ. SOUP CUP
6P—11" PLATTER-TRAY

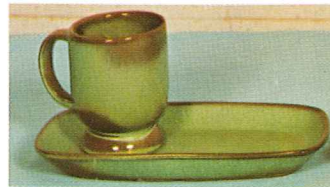


COFFEE AND DESSERT SET
5PS—9" PLATTER-TRAY
C2—10 OZ. MUG
(or choose your own style
Mug — See Pg. 10)



6J SET

6J—2 CUP TEAPOT
504—INDIVIDUAL SUGAR
553—INDIVIDUAL CREAM
6P—11" PLATTER TRAY

 6S/ST—TWO-SPOUT GRAVY/W TRAY

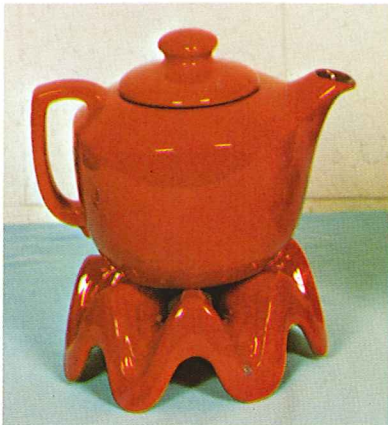

5TL/W—TEAPOT & WARMER SET
5TL—12-CUP TEAPOT WA1—WARMER



26 SET—
RINGED CANNISTER SET

26F—FLOUR, COOKIES, CORN MEAL

26S—SUGAR

26C—COFFEE

26T—TEA



26G—SUGAR/GREASE 26H—SALT & PEPPER
4-PIECE SET/BOXED



26DC SET

26D—1 QT. PITCHER 26DC—3 OZ. JUICE
91—TRAY



5LC SET

81—1 QT. PITCHER 5LC—6 OZ. JUICE
91—TRAY