




167—3½" MINIATURE HORSESHOE

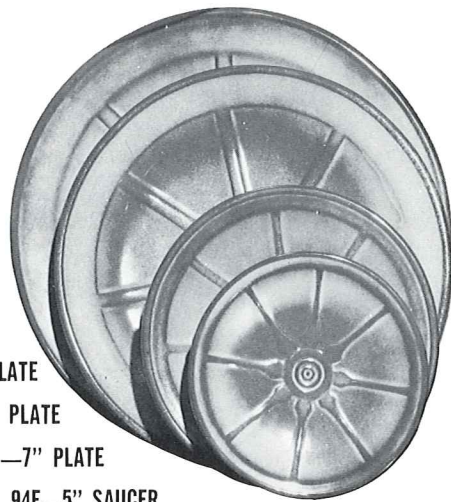

94FL—10" PLATE

94F—9" PLATE

94G—7" PLATE

94E—5" SAUCER



94H—SALT & PEPPER



94M—16 OZ. MUG



94XL—20 OZ. BOWL



94V—2 QT. BAKER/BEAN POT
94V/W—BAKER W/WARMER SET



94B—SUGAR WITH LID




94A—8 OZ. CREAMER
94AB—CREAM & SUGAR SET



94C—5 OZ. CUP



94X—14 OZ. CEREAL

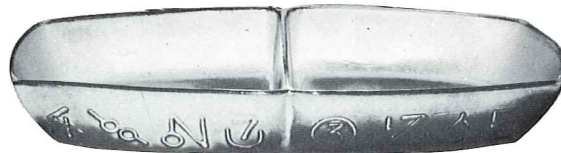

94QD—13" DIVIDED BOWL



94L—12 OZ. TUMBLER



94XO—6 OZ. DESSERT



94W—3 QT BAKER/BEAN POT
94W/W—BAKER/W WARMER SET



94Q—13" PLATTER



94N—1 QT. VEGETABLE BOWL




94P—17" PLATTER



94J—2 CUP TEAPOT



94D—2 QT. PITCHER

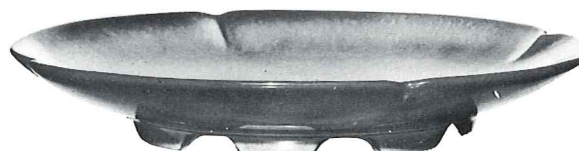

5FC—15" CHOP PLATE