



*167—3½" MINIATURE HORSESHOE 2.50



94M—16 OZ. MUG 4.50



 
9.25 94V—2 QT. BAKER/BEAN POT 16.50 94V/W—BAKER W/WARMER SET



13.25 94W—3 QT BAKER/BEAN POT 20.50 94W/W—BAKER/W WARMER SET



94D—2 QT. PITCHER 9.25

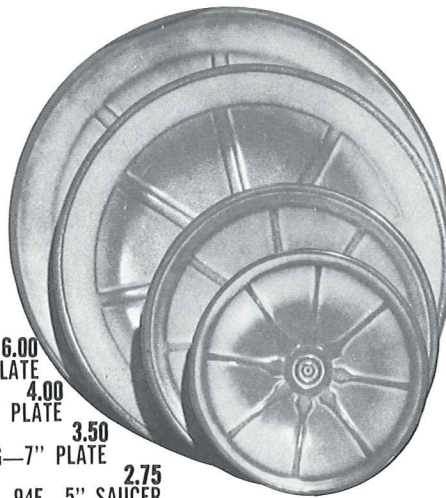

6.00 94FL—10" PLATE 4.00 94F—9" PLATE 3.50 94G—7" PLATE 2.75 94E—5" SAUCER



94B—SUGAR WITH LID 5.00



94A—8 OZ. CREAMER 3.25 94AB—CREAM & SUGAR SET 8.00



 
94QD—13" DIVIDED BOWL 7.75



94Q—13" PLATTER 7.75



94P—17" PLATTER 17.50

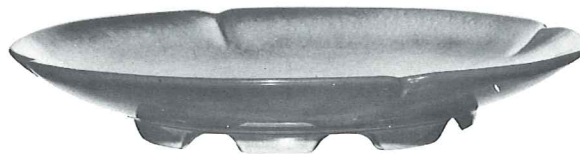

5FC—15" CHOP PLATE 25.00



*243—6½" CRESCENT SALAD 2.50



94H—SALT & PEPPER 4.75



94C—5 OZ. CUP 3.25



94L—12 OZ. TUMBLER 3.75



*244—INDIVIDUAL VEGETABLE BOWL 2.50



94XL—20 OZ. BOWL 3.75



94X—14 OZ. CEREAL 3.25



94XO—6 OZ. DESSERT 2.75



94N—1 QT. VEGETABLE BOWL 4.75



94J—2 CUP TEAPOT 6.50



242 *CORN DISH 2.50