



9.25 80—2 QT. PITCHER 5L—12 OZ. TUMBLER 3.75

Gift Sets



82C SET 33.00
(CARAFE, WARMER,
4 C12 MUGS)

82 SET (82—6 CUP CARAFE & LID 82W—WARMER) 20.00



6T—6 CUP TEAPOT 9.25 5DA—6 OZ. CREAMER 3.25
WA3—6" WARMER W/CANDLE 5.00 5DB—6 OZ. SUGAR 3.25



 
12.50 5D—3 QT. PITCHER 5M—16 OZ. MUG 4.50



6S—TWO-SPOUT GRAVY 6.50
5PS—9" PLATTER-TRAY 3.75
6S/ST—TWO-SPOUT GRAVY/W TRAY 10.00



SOUP AND SANDWICH SET
4SC—11 OZ. SOUP CUP 3.75
6P—11" PLATTER-TRAY 4.50

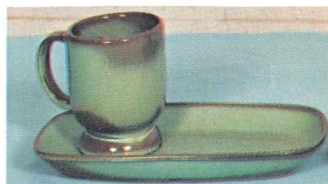


COFFEE AND DESSERT SET 3.75
5PS—9" PLATTER-TRAY
C2—10 OZ. MUG 3.25
(or choose your own style
Mug — See Pg. '9)



6J SET 16.50

 6J—2 CUP TEAPOT 6.50
504—INDIVIDUAL SUGAR 2.75
553—INDIVIDUAL CREAM 3.25
6P—11" PLATTER TRAY 4.50

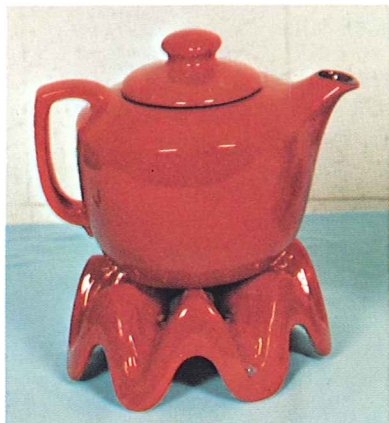

5TL/W—TEAPOT & WARMER SET 20.00
5TL—12-CUP TEAPOT WA1—WARMER
13.00 7.50



26 SET— 55.00
RINGED CANNISTER SET

26F—FLOUR, COOKIES, CORN MEAL 18.50 26S—SUGAR 14.25
26C—COFFEE 12.00 26T—TEA 11.00



26DC SET 24.00

26D—1 QT. PITCHER 26DC—3 OZ. JUICE
6.50 3.25
91—TRAY 4.75



5LC SET 24.00

81—1 QT. PITCHER 5LC—6 OZ. JUICE
6.50 3.25
91—TRAY 4.75



26G—SUGAR/GREASE 26H—SALT & PEPPER
9.25 6.00
26GH—4-PIECE SET/BOXED 15.00