




7V—2 QT. BAKER/BEAN POT 9.25
7V/W—BAKER & WARMER, SET 16.50

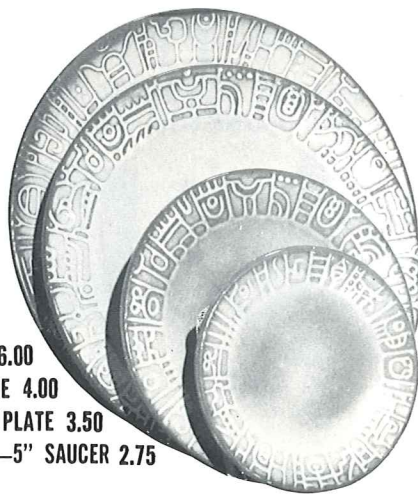

7FL—10" PLATE 6.00
7F—9" PLATE 4.00
7G—7" PLATE 3.50
7E—5" SAUCER 2.75



7D—2 QT. PITCHER 9.25



7W—3 QT. BAKER/BEAN POT 13.25
7W/W—BAKER & WARMER, SET 20.50



7B—SUGAR WITH LID 5.00



7A—6 OZ. CREAMER 3.25

7AB—CREAM & SUGAR SET 8.00



7C—CUP 3.25



7M—14 OZ. MUG 4.50



*C4—12 OZ. COFFEE MUG 3.25



7XO—8 OZ. FRUIT 2.75



7H—SALT & PEPPER 4.75



7QS—13" STEAK PLATTER (SHALLOW PLATTER) 5.00



*243—6 1/2" CRESCENT SALAD 2.50



7X—14 OZ. CHILI-SOUP 3.25



7K—BUTTER DISH 6.50



7Q—13" DEEP PLATTER 7.75



7XL—20 OZ. SALAD 3.75



7PS—9" TRAY 3.75



7FC—15" CHOP PLATE 25.00



7N—1 QT. VEGETABLE BOWL 4.75



7J—2 CUP TEAPOT 6.50



7T—6 CUP TEAPOT 9.25



*242 CORN DISH 2.50



7TP—17" AZTEC OVAL PLATTER 17.50