



7V—2 QT. BAKER/BEAN POT 9.25
7V/W—BAKER & WARMER, SET 16.50



7W—3 QT. BAKER/BEAN POT 13.25
7W/W—BAKER & WARMER, SET 20.50



7H—SALT & PEPPER 4.75



7K—BUTTER DISH 6.50



 
7PS—9" TRAY 3.75



7J—2 CUP TEAPOT 6.50



7T—6 CUP TEAPOT 9.25

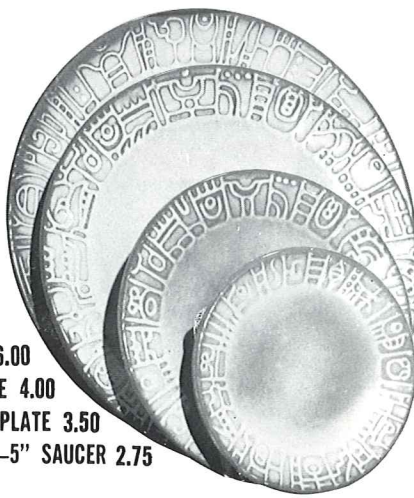

7FL—10" PLATE 6.00
7F—9" PLATE 4.00
7G—7" PLATE 3.50
7E—5" SAUCER 2.75



7B—SUGAR WITH LID 5.00



7A—6 OZ. CREAMER 3.25

7AB—CREAM & SUGAR SET 8.00



7QS—13" STEAK PLATTER (SHALLOW PLATTER) 5.00



7Q—13" DEEP PLATTER 7.75



7FC—15" CHOP PLATE 25.00



7TP—17" AZTEC OVAL PLATTER 17.50



7D—2 QT. PITCHER 9.25



7C—CUP 3.25



*C4—12 OZ. COFFEE MUG 3.25



 
7M—14 OZ. MUG 4.50



7X0—8 OZ. FRUIT 2.75



*243—6 1/2" CRESCENT SALAD 2.50



7X—14 OZ. CHILI-SOUP 3.25



7XL—20 OZ. SALAD 3.75



7N—1 QT. VEGETABLE BOWL 4.75



*242 CORN DISH 2.50